



LG VX5300 Front LCD Screen Replacement

This guide aids in disassembly, repair, and reassembly of the front LCD screen.

Written By: stephanie



INTRODUCTION

Outline what you are going to teach someone how to do.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Front LCD Screen



- Remove the rubber stoppers from the four corners of the front screen.

Step 2



- Using the Phillips screwdriver, carefully remove all four screws.

Step 3



- To pry open the face plate, use the iFixit Opener tool. Place it in the crease of the phone.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-23 03:17:24 PM.